


FLUKE®

321 and 322 Clamp Meter Instruction Card


⚠ Warning

- Read the 321, 322 Clamp Meter Safety Sheet before using this meter.
- Před použitím této zkoušečky si přečtete bezpečnostní informace ke klešťovému měřicímu přístroji 321, 322.
- Przed użyciem próbnika należy przeczytać instrukcje dotyczące bezpieczeństwa miernika cęgowego zamieszczone w dokumentach nr 321 i 322.
- Перед использованием данного измерительного прибора прочтите Инструкции по технике безопасности токоизмерительных зажимов 321, 322.
- Bu test cihazını kullanmadan önce 321, 322 Pens Metre Güvenlik Broşürü'nü okuyun.

On/Off


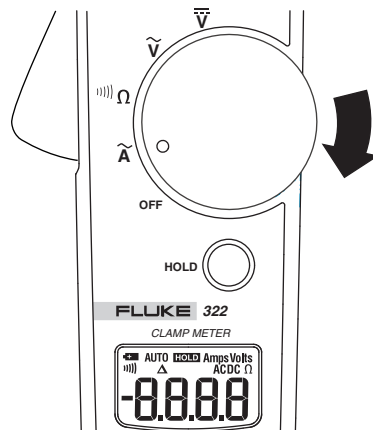


Automatic Off

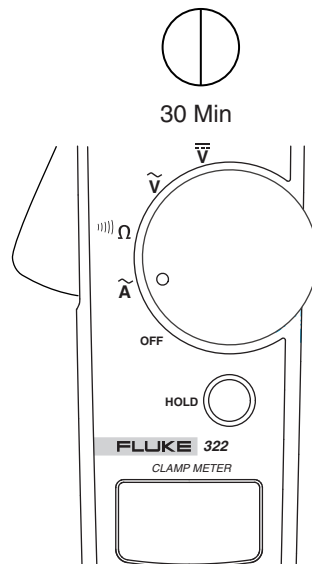

~
A

Fluke 321 0 - 400.0 A
Fluke 322 0 - 40.00 A, 40.0 - 400.0 A

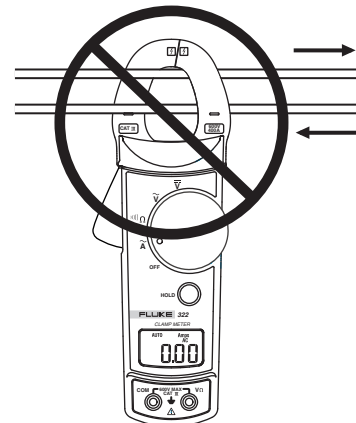
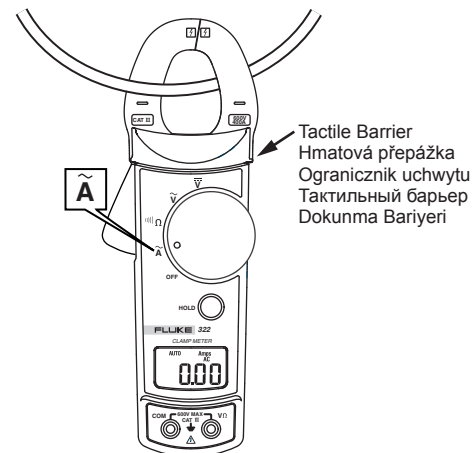


Currents Cancel
Proudy se vruší
Prądy znoszą się wzajemnie
Отменить ток
Akım İptal



Specifications

* @ 23 °C ± 5 °C, 0 - 90% RH		321	322
~ A	Range	0 - 400.0 A	0 - 40.00 A 40.0 - 400.0 A
	Accuracy	50 - 60 Hz 60 Hz - 400 Hz	1.8% ±5 count 3.0% ±5 count
	AC Response	Avg	
~ V	Range	0 - 400.0, 400 - 600 V	
	Accuracy	50 - 400 Hz 1.2% ±5 counts	
m V	Range	-	0 - 400.0, 400 - 600 V
	Accuracy		1% ±5 counts
Ω	Range	0 - 400.0 Ω	
	Accuracy	1.0% ± 5 counts	
Continuity	⏏	≤30 Ω	
Jaw Opening	1 inch or 26 mm		
IP Rating	40		
Storage Temperature	-30 °C to 60 °C		
Operating Temperature	-10 °C to 50 °C		
Altitude	2000 m		
EMC - EN61326			
CAT III 600V, pollution degree II: CAT III equipment is designed to protect against transients in equipment in fixed - equipment installations, such as distribution panels, feeders and short branch circuits, and lighting systems in large buildings.			
* < 18 °C, > 28 °C add 0.1 x (specified accuracy)/°C.			


Continuity

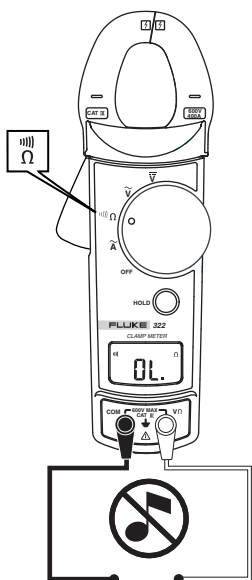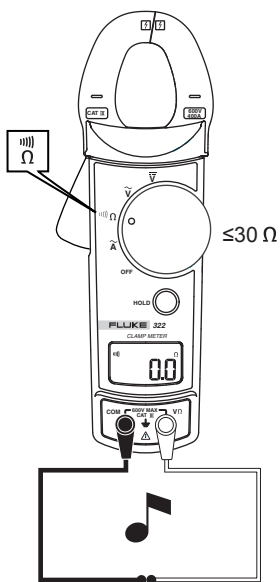


Hold

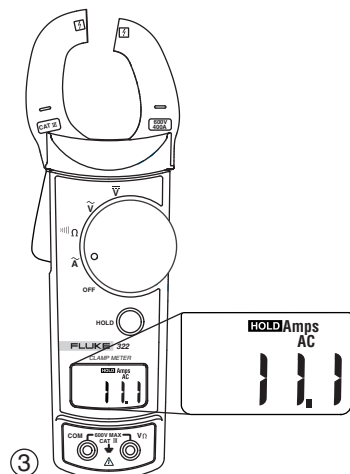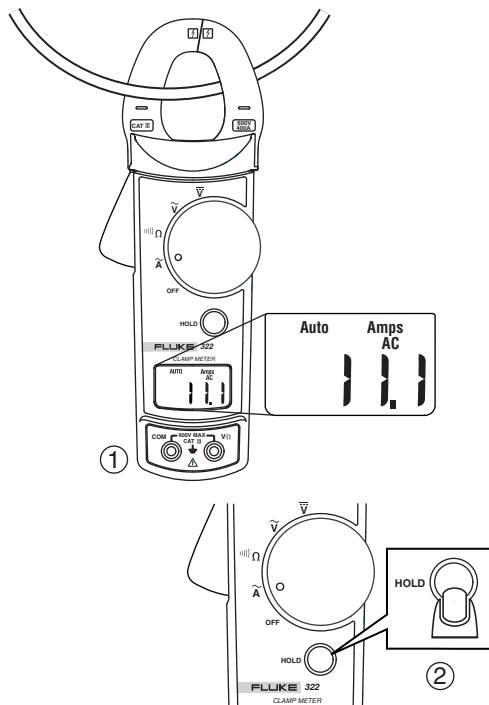

Battery Replacement

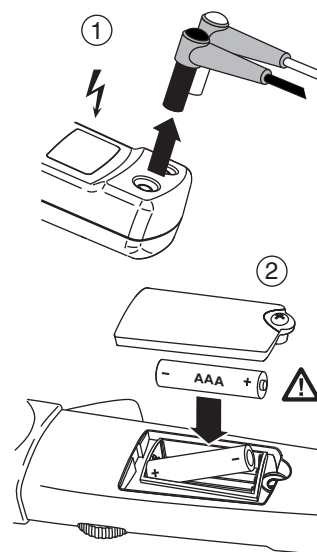

V, Ω
 0 - 600 V dc 322
 0 - 600 V ac
 0 - 400.0 Ω

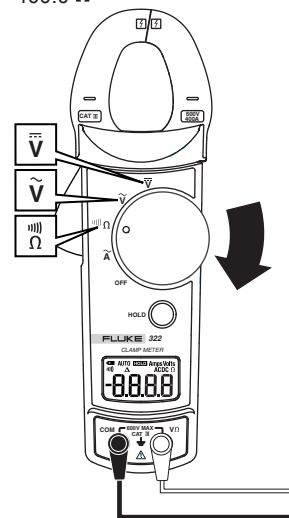

Cleaning

- Wipe the case with a damp cloth and mild detergent. Do not use abrasives or solvents.
- Pravidelně otírejte pouzdro přístroje navlhčeným hadříkem a jemným saponátem. Nepoužívejte prostředky s brusným efektem a rozpouštědla – poškodili byste přístroj.
- Obudowę należy przecierać wilgotną ściereczką z delikatnym środkiem czyszczącym. Nie należy stosować środków ściernych lub rozpuszczalników.
- Протирайте корпус влажной тканью с использованием небольшого количества моющего средства. Не используйте абразивные материалы или растворители.
- Cihazın kasasını nemli bir bez kullanarak yumuşak bir deterjanla silin. Aşındırıcı malzeme veya solvent kullanmayın.