



Network Support Division

TS[®] 45S ADSLSafe[™] Test Set

No part of this publication may be reproduced, stored on a retrieval system, or transmitted, in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Harris Corporation. The use of trademarks or other designations is for reference purposes only.

NOTICE




Harris Corporation makes no warranties about this document. Harris Corporation reserves the right to make hardware and software changes to the product described within this document without prior notice and without obligation to notify any person of such revision or change.

TRADEMARKS

TS is a registered trademark of Harris Corporation.

REGULATORY INFORMATION

WARNING: This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the installation manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15, Subpart J of the FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of the equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

<i>Declaration of Conformity</i>	
Manufacturer: Harris Corporation Network Support Division 809 Calle Plano Camarillo, CA 93012 U.S.A.	Standards Used: FCC part 15 CISPR 22 EN300386-2:97 EMC, ESD Directives EN61010.1 (1993). Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use. CSA/CAN C22.2 No. 1010.1-92 Safety
_____ Ed Zoiss, Director of Engineering	
Importer: _____ _____ _____	
Signature: _____ Print: _____	
Model: TS45S	
Serial: _____	
Harris Corporation officially declares the test equipment listed above is in conformity with Electromagnetic Compatibility Directive 89/336/EEC and Low Voltage Directive 73/23/EEC based on test results performed in a typical configuration. This Conformity is indicated by the following symbols representing the European Community and compliance organizations:	
  	



Safety Information

Read First Before Use

**WARNING:**

Means conditions and hazards may pose risk to user.

**CAUTION:**

Means conditions and hazards may damage the test set.

The following IEC symbols are used either on the test set or in the manual:



See Manual for details



Earth Ground



Conformité Européenne



Industry Canada and U.S.
Safety Approval

Introduction

The TS45S Test Set is an analog test telephone used by installers, repair technicians, and other authorized personnel for the testing of copper wire, voice subscriber lines. In addition to standard off-hook telephone operations (e.g., tone and pulse dialing), the TS45S has an on-hook Monitor mode which allows the operator to monitor line conditions without affecting voice or data signals that may be on the line. The TS45S has a built in speakerphone allowing two-way conversation and freeing up the operator's hands for other tasks.

In today's telecommunications environment, a large number of subscriber lines carry both voice and data services simultaneously. The most common combination is ADSL with POTS. The TS45S incorporates unique circuitry (patent pending), which allows technicians to go off-hook to test the POTS (voice) portion of an active ADSL circuit without disrupting the ADSL. In addition, if the TS45S is accidentally connected to any subscriber data service, it will not disrupt the service.

Design Features

[Table 1](#) lists the design features of the TS45S series.

Table 1. TS45S Series Design Features

Feature	Feature
Data Detection in Monitor Mode	Receive-Only Loud Speaker
DataSafe™ in Monitor Mode	Speed Dialing for ten 23 digit numbers
Data Detection and Lockout in Talk Mode	Tone and Pulse Dialing
Data Lockout Override	Hook Flash
High Impedance Monitor	Low Loop Current Test
High Voltage Protection	Field Replaceable Line Cord
Last Number Redial up to 23 digits	Low Battery Indication
Microphone Mute	Field Replaceable Belt Clip
PBX Pause Key	Field Replaceable Battery
Continuous Polarity Indication in Talk Mode	Weatherproof Case
Two-Way Speakerphone	Software Upgradeable

Audio Controls

Table 2 describes the audio control keys for the TS45S Test Set. The three keys are located on the inside handle of the test set between the handset receiver and the handset microphone (see Figure 2). These controls allow the operator to switch between the handset and speakerphone, to mute the active microphone, and to control the volume of the received audio signal.



WARNING:

Never hold the loud speaker up against your ear when it is on, or when turning it on or off. Sounds emitted by the loud speaker can achieve levels that are damaging to the ear.

Table 2. Test Set Audio Controls

Key	Description
Mute Key	<p>The Mute key (see Figure 2) is functional only when the test set is off-hook; it has no function when the unit is on-hook. When the test set is off-hook and is being used as a handset, pressing the Mute key will shut off the handset's microphone. This is useful when using the test set in noisy environments such as near a street with a lot of traffic. With the Mute on, ambient noise is not picked up by the test set's microphone and therefore does not end up in the operator's ear. When the Mute is on, it is easier for the operator to hear the person at the other end of the line and easier to hear static or noise on the line.</p> <p>When the test set is off-hook and is in Speakerphone mode, pressing the MUTE key will shut off the speakerphone's microphone and will put the test set into a Receive-Only Loud Speaker mode. This is a better mode for troubleshooting than Speakerphone mode.</p> <p>When Mute is on, the Mute LED will flash.</p> <p>Pressing the MUTE key while a microphone is muted, will unmute the microphone.</p>
Volume Key	<p>The Volume key (see Figure 2) is labeled VOL. Pressing the VOL key switches the sound level of the test set's active receiver between Normal and High volume. This is true in Monitor mode as well as Talk mode. The state of the VOL key is preserved when the active receiver is changed. For example, assume the handset receiver is set to high volume, if you switch to the loud speaker, it will also be set to high volume. The VOL key only affects the volume of received signals. It does not affect the volume of transmitted signals.</p>
Speaker Key	<p>The Speaker key (see Figure 2) is labeled SPKR. The SPKR key is used to turn the test set's loud speaker on and off. It functions in both Talk and Monitor modes.</p> <p>In Monitor mode, if the test set is being used as a handset, pressing the SPKR key will turn on the loud speaker. This allows a user to monitor a line while working at a distance from the test set.</p> <p>If the test set is off-hook and is being used as a handset, pressing the SPKR key will turn on the test set's Speakerphone. The handset microphone and receiver are shut off and the speakerphone microphone and speaker are enabled. This mode is intended for two-way, hands-free conversation.</p>

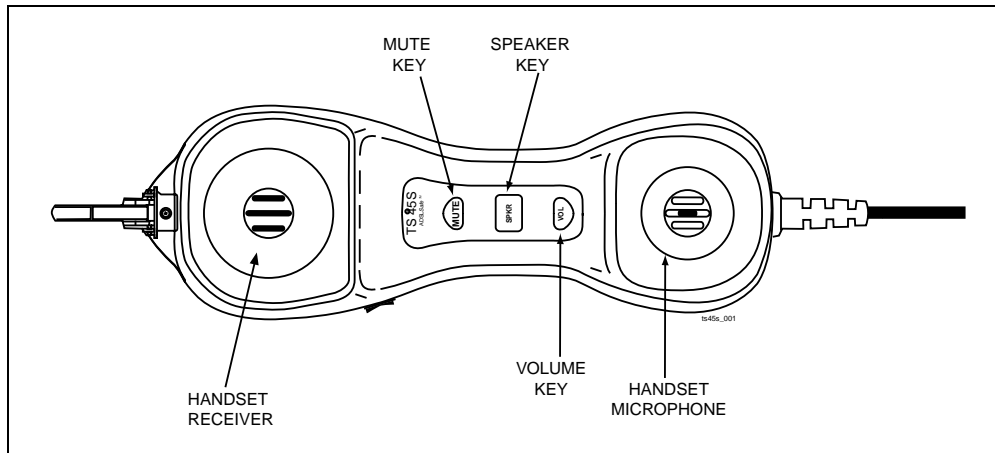


Figure 2. Controls and Indicators

Keypad Controls and Indicators

Table 3 lists the keys on the keypad and other indicators on the test set. Figure 3 illustrates the keypad and overlay.

Table 3. Test Set Keypad Controls and Indicators

Key	Description
Keypad	The keypad (see Figure 3) is used to dial telephone numbers and make function selections. The numeric keypad includes 12 standard dialing keys including the asterisk (*) and the pound (#) keys. The seven special purpose keys are labeled STORE/PROG, TONE/PULSE, RCL, LNR, PAUSE, FLASH, and DATA.
RCL Key	The RCL (Recall) key is used for the storing and recalling of repertory dialing numbers. See the Program Speed Dialing Section.
FLASH Key	The FLASH (Hook-Flash) key is used to interrupt loop current for a timed duration. The FLASH key only operates when the test set is off-hook. When pressed, the FLASH key will interrupt loop current for the programmed hook-flash duration. See the Hook-Flash Duration Section.
DATA Key	<p>The DATA key is used to perform a high-speed data detection test when the test set is in Monitor mode. During the test, the unit hunts for data above the audio range. If data is detected on the line under test, you will hear a warning tone that will continue for about 5 seconds. If data is not detected, you will hear a brief all clear chime indicating the test was performed and no data was detected. This is the safest way to test for data.</p> <p>When the test set is off-hook, pressing the DATA Key will cause the test set to measure loop current. If the current is below 20 mAdc, one of the two polarity LEDs will flash for about 5 seconds. If the loop current is 20 mA or higher no LEDs will flash. Low loop current may be indicative of a problem on the line.</p>
LNR Key	The LNR (Last Number Redial) key is used to redial the number most recently dialed. See the Last Number Redial Section for more details.

Table 3. Test Set Keypad Controls and Indicators (Cont'd)

Key	Description
PAUSE Key	The PAUSE key is used to insert a timed pause into a stream of dialed digits. The PAUSE key is most commonly used in combination with speed dial numbers that will be dialed out through a PBX. The duration of the pause is user programmable. See the PBX Pause Duration Section.
STORE/PROG KEY	The STORE/PROG key is used for storing speed dialing numbers and for programming special test set functions.
TONE/PULSE KEY	The TONE/PULSE key is used to switch between tone and pulse dialing. The TONE/PULSE key is only active when the test set is off-hook. Any time the test set goes off-hook, the test set defaults to tone dialing. Once off-hook, pressing the TONE/PULSE key will change the dialing mode to pulse dialing. Pressing the key again will switch back to tone dialing.
Light Emitting Diodes (LEDs)	All LED indicators are located on the keypad (see Figure 3) inside the recessed area.
Polarity LED	Notes: 1. The test set is not polarity sensitive, and will function in either polarity. 2. The POL LEDs will not light if the test set is on-hook or when the loud speaker is on. When the test set is off-hook in handset mode, one of the two Polarity (POL) LEDs will illuminate automatically to indicate the DC polarity of the line. The green POL LED will light if the red test lead is connected to the Ring (negative) side of the line and the black test lead is connected to the Tip (positive) side of the line. The red POL LED will light if the test leads are reversed; that is, with the red test lead connected to the Tip (positive) side and with the black test lead connected to the Ring (negative) side.
Mute LED	The MUTE LED flashes when the MUTE function is activated.
Low Battery LED	The LOW BATT LED (battery low) flashes when the 9V battery is nearing the end of its life. The low battery LED will only become active in operating modes that use the battery.
Electronic Ringer	The electronic ringer is enabled while the test set is on-hook.

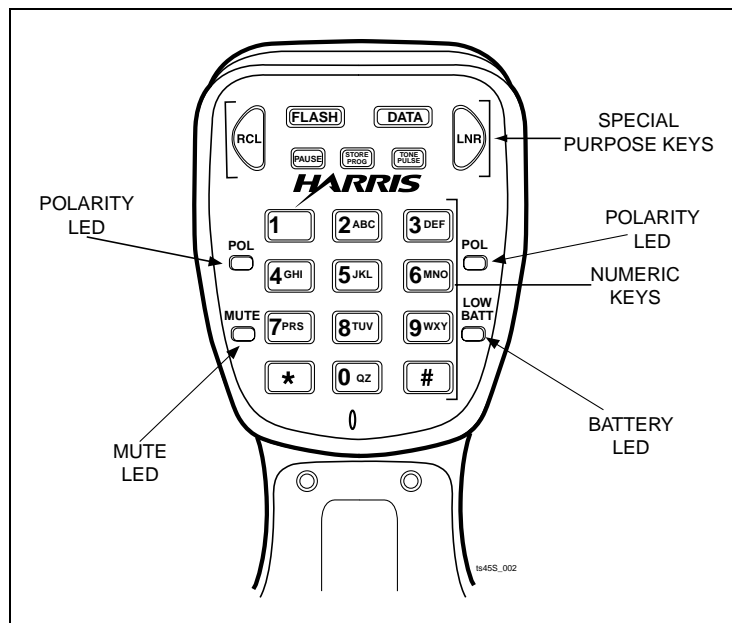


Figure 3. TS45S Keypad and Overlay

Table 4. TS45S Model and Line Cord Types

Model Number	Cord Type	
	Part Number	Description
45801-001	P4580-001	Standard Cord (STD) with Piercing Pin Clips
45801-004	P4580-004	CO Line Cord with 346A Plug
45801-008	P4580-008	Angled Bed-of-Nails Cord (ABN)
45801-009	P4580-009	Angled Bed-of-Nails Cord (ABN) and Piercing Pin Clips

Operation

The test set has two basic modes of operation: Talk mode and Monitor mode. Talk mode is used for off-hook operations (e.g., dialing verification, automatic number identification, and audio quality verification). Monitor mode is for audio monitoring of the Tip and Ring pair while on-hook. In Monitor mode, the test set has a high input impedance, which allows monitoring of the line without disrupting conversations or data signaling if present.

Talk/Monitor Switch

The TALK/MONITOR switch is a rocker switch located on the side of the test set (see [Figure 1](#)). Switching the TALK/MONITOR switch to the TALK (T) position puts the test set into Talk mode. Switching the TALK/MONITOR switch to the MONITOR (M) position puts the test set into Monitor mode.



CAUTION:

When testing circuits which are close to a battery source, the pops in the handset receiver that result from clipping onto a line may be quite loud. Although there is protection against acoustic shock built into the test set, if the receiver is held tightly against the ear, acoustical shock may occur. The test set is designed to rest comfortably on the shoulder with some space between the receiver and the ear. It should be used in this position when working close to a battery source.

Operating the Test Set in Monitor Mode

While in Monitor mode, the test set is always on-hook. The test set draws no direct current from the line and it transmits no signals to the line. In this mode, the test set has a high AC input impedance, which allows listening for audio signals without disrupting conversations or data signaling that might exist on the line. Either the handset receiver or the loud speaker can be used to monitor a line. In the Monitor mode, the test set is typically used to perform one or more of the following procedures:

- Verification that a line is idle when looking for a line to borrow.
- Listening for noise on the line.
- Hunting for tracer tones.
- Performing a test for the presence of high frequency data on the line using the DATA key.

Operating the Test Set in Talk Mode

When switched to Talk mode, the test set performs a short test for high-speed data and talk battery on the line. If high-speed data is detected, the test set will generate an audio alarm and will remain on-hook. If high-speed data is not detected and talk battery is present, the test set will go off-hook. When off-hook, the test set operates like a standard telephone; it is typically used to verify the proper operation of a voice telephone line or to establish temporary communications on a "borrowed pair".

Originating a Call	<ol style="list-style-type: none">1. Put the test set in Monitor mode.2. Clip the test set to Tip and Ring of a subscriber loop.3. Monitor (listen to) the line to verify it is idle.4. If not idle, disconnect the test set from the line.5. If the line is idle, move the TALK/MONITOR switch to the TALK position. The test set automatically tests for high-speed data and talk battery on the line.6. If data is detected, the test set will not go off-hook (will lockout) and will beep indicating the presence of data. Try another line.7. If there is no data and talk battery is present, the test set will go off-hook and draw dial tone.8. Dial the desired number.
Disconnecting a Call	To disconnect a call, move the TALK/MONITOR switch to the MONITOR position or remove the test leads from the line.

Data Safe Practices



CAUTION:

Shorting the TIP and RING leads together while connected to a data line will cause disruption to the data.

Always monitor the line for an audible signal before attempting to go off-hook to draw dialtone. The data detect circuitry on the test set is designed to detect data signals above the human audio range. To detect data signals within the human audio range, such as produced by voiceband modems and subrate DDS transceivers, you must listen to the line using the unit's audio monitoring capability. If you hear the telltale hiss of a voice band modem or low frequency data transceiver, do not move the TALK/MONITOR switch to TALK. If you do switch to TALK, the test set will not lockout because it does not detect low frequency data. It will go off hook and it will interfere with the voice band modem or data transceiver. To avoid this, try another line or wait until the line is idle.

Data detection is a two part process. The first part requires listening to the line for audible data traffic in Monitor mode as described above. If the line is quiet, then the second part is to use the data detect capability of the test set to determine if there is data above the human audio range on the line. This can be done in one of two ways.

- First, you can test for high-speed data with the test set still in Monitor mode by pressing the DATA key. If there is high-speed data on the pair, the test set will generate a warning alarm for about 5 seconds. If there is no data on the line, the test set will generate a short confirmation tone. If all clear, then switch the test set to Talk mode, it will go off-hook.
- Secondly, you can test for data by switching the TALK/MONITOR switch to TALK. The test set will automatically perform a short test for high-speed data. If there is data on the line, the test set will lockout, (will remain on-hook) and will generate a data warning alarm. If there is no data on the line, the test set will go-off-hook.

To test several lines in succession, wait 2 seconds after unclipping the test leads from the present pair before connecting to the next pair. This allows the test set to go back on-hook and the data detect circuitry to reset. If you don't wait 2 seconds, you may connect to the second line with the test set still off-hook. If the second line happens to be carrying data, it will be corrupted.

When going from pair to pair searching for tracer tone or dial tone it is best to connect the test set to Tip and Ring of the pairs. Avoid the practice, either in Talk or Monitor mode, of clipping one lead of the test set to ground, and using the other lead to search for tracer tone or dial tone on a block. This may create an electrical imbalance on a data line that will disrupt service. Once you find the voice line you are searching for then it is OK to test Tip to ground or Ring to ground on that line.

Be careful not to short the test leads together if you are connecting to a data line (or any line for that matter), as this could bring down the service.

It is best to put the test set in Monitor mode when troubleshooting a line, searching for capacitance kicks, RF signals, craft provided tones, etc.

Lockout Override Operation

Normally, when the test set detects data, it means the operator has accidentally connected to a high-speed data line and should immediately disconnect from the line to avoid disrupting the data service. But in some cases the operator knows that he needs to go off-hook on a specific line even though the test set is indicating that the line is a data line.

The following are scenarios where the operator may wish to override a data lockout:

- When there is false data detection due to RF pickup on a line that is near an AM radio broadcast antenna. The RF induced in the line may appear to be data.
- When accessing POTS on a subscriber line that carries both ADSL and POTS

Telephone lines near AM radio broadcast facilities, pick up the RF signals from the broadcast antennas. Normally this isn't a problem for the test set. If the line is well balanced, the test set will not see the RF signal because it is a common mode (longitudinal) signal. But if the line isn't well balanced, a portion of the RF signal will be converted to a differential (metallic) signal. If the RF signal amplitude is high enough, it may be detected as high-speed data by the test set. If you know for sure you are on such a line, use the unit's override capability to go off-hook.

The lockout override can only be activated when the TALK/MONITOR switch is in the TALK position. To activate the override, press the STORE/PROG key then the DATA key. If DC voltage is present, the test set will go off-hook. To go back on-hook, simply unclip the test set's test leads from the line or put the unit into Monitor mode. The override key sequence must be repeated each time a locked-out test set needs to be taken off-hook.

Operating Your Test Set on ADSL

The TS45S Test Set is designed to go off-hook on a line that simultaneously carries POTS and ADSL, enabling access to the voice portion of the line traffic without taking down the ADSL service. The reason for going off-hook on this type of line is to verify the POTS portion is working properly. Typical scenarios follow.

<p>Originate a Call on an ADSL/POTS Line</p>	<ol style="list-style-type: none"> 1. Clip the test set's leads to the ADSL line. It is best to clip both test leads to the line under test at about the same time to avoid prolonged line unbalance. 2. Move the TALK/MONITOR switch to TALK. The test set will automatically perform a test for high-speed data and will alarm indicating the presence of data (in this case, ADSL data). 3. Execute an Override by pressing the STORE/PROG key followed by the DATA key. The test set will go off-hook and will draw dial tone. 4. A call can be placed to verify dialing and speech quality. <p>Most of the time users of the test set will be originating calls but occasionally there may be a need to receive a call when connected to an ADSL pair.</p>
<p>Incoming Call</p>	<ol style="list-style-type: none"> 1. To detect an incoming ring signal on an ADSL pair, the only requirement is that the test set must be on-hook. It is not important what position the TALK/MONITOR switch is in. 2. If the TALK/MONITOR switch happens to be in the MONITOR position and the ring signal is received, the test set will sound its ringing tone. 3. Move the TALK/MONITOR switch to TALK. The test set will lockout and sound an alarm indicating that high-speed data is on the line. During the reception of a ring burst the test set will turn on its ringing tones for the duration of the ring burst. During the time between ring bursts, the test set will again generate an alarm to remind the user that ADSL data is still being detected. 4. To answer the incoming call, the user must execute a Lockout Override by pressing the STORE/PROG key followed by the DATA key while the test set is in TALK mode. The test set will then go off-hook. <p>It is important to understand that ADSL lines are very sensitive to intrusion. Careless troubleshooting with any device, the TS45S Test Set included, will cause the ADSL service to shut down. But careful application of the test set will permit the solution of many voice service problems without shutting down the ADSL service.</p>

Configuring Your Test Set

<p>Last Number Redial</p>	<p>In the Tone or Pulse dialing mode, the last number dialed can be automatically redialed by pressing the LNR key after going on-hook and then back off-hook. To redial a number, the LNR key must be the first key pressed after going back off-hook.</p> <p>If, after going off-hook, any dialing key is pressed, the LNR memory will be cleared and the value of the pressed key will be the first number stored in the cleared memory.</p> <p>The PAUSE key is considered a dialing key. If pressed, it is stored in the redial memory, taking up one of the 23 digit slots.</p> <p>In tone dialing mode, the dialing keys that are permitted to be stored in LNR memory include 1,2,3,4,5,6,7,8,9,0,*,# and PAUSE. If the star (*) and pound (#) keys are pressed in pulse mode they will be ignored. The star (*) and pound (#) keys will not be redialed when the test set is in pulse mode even if the redial memory includes star (*) and pound (#).</p>
<p>Program Speed Dialing Numbers</p>	<p>While in Monitor mode, the test set allows the storage of ten speed dialing numbers in ten memory locations (0 through 9). Each location will store up to 23 digits. If an attempt is made to store more than 23 digits, only the first 23 are stored. The PAUSE key is accepted as a dialing digit when storing numbers.</p>
<p>Storing a Number When in Monitor Mode (Preferred Method)</p>	<ol style="list-style-type: none"> 1. Make sure the TALK/MONITOR switch is in the Monitor position. 2. Press RCL. 3. Using the dialing keypad, enter the number to be stored. 4. Press the STORE/PROG key. 5. Press one of the number keys (0 through 9) to select the number of the memory location . 6. A confirmation tone will be issued by the test set. <p>Note: If the RCL key is pressed while programming a number sequence, the programming mode will be exited; all other non-dialing keys will be ignored.</p>
<p>Storing the Last Number Dialed</p>	<p>If you dial a number then go on-hook and you decide you want to save that number in speed dialing memory, do the following:</p> <ol style="list-style-type: none"> 1. Make sure the TALK/MONITOR switch is in the MONITOR position. 2. Press RCL. 3. Press LNR (Last Number Redial). 4. Press the STORE/PROG key. 5. Press one of the number keys (0 through 9) to select the number of the memory location. 6. A confirmation tone will be issued by the test set.
<p>Storing a Number You Are Calling</p>	<ol style="list-style-type: none"> 1. Connect the test set to a working telephone line, set the TALK/MONITOR switch to TALK, and receive dial tone. 2. Dial the number. 3. Press STORE/PROG key. 4. Press one of the number keys (0 through 9) to select the number of the memory location.

Dialing a Stored Number	<ol style="list-style-type: none"> 1. Connect the test set to a working telephone line. 2. Set the TALK/MONITOR switch to TALK. 3. When the test set goes off-hook, press RCL (RECALL) and then the number key (0 through 9) for the memory location. For example, to dial a number stored in location 5, press RCL and then 5. The number will be automatically dialed. 										
Putting a Pause in a Stored Number	<p>In some situations it may be necessary to put a pause between digits of a stored number, as when accessing a trunk through a PBX that requires a 9 to get an outside line. You can do this by pressing the PAUSE key at the point where the pause is required. For example, to store the number 9-555-1234, with a pause between the 9 and 5, enter 9[PAUSE]5551234. When the number is dialed out, there will be a pause between the 9 and 5. The duration of a pause is user programmable (see Pause Duration). You can insert a longer pause by pressing PAUSE more than once.</p> <p>Note: Each time the Pause key is pressed, it counts as one dialing digit.</p>										
Hook Flash Duration	<p>When the test set is off-hook, pressing the FLASH key causes a timed interruption of the loop current to occur. Some PBX setups or telephone office switches may use this signal to put a call on hold or to activate some special function. One flash is generated for each press of the key.</p> <p>To change the flash duration value:</p> <ol style="list-style-type: none"> 1. Make sure the Talk/Monitor switch is in Monitor mode. 2. Press the STORE/PROG key. 3. Press the FLASH key. 4. Press one of the following number keys (0 through 9) to select the desired hook flash length. Invalid entries are ignored. The test set provides a confirmation tone when the entry is accepted. <table border="0" data-bbox="462 1003 1003 1150"> <tr> <td>1 - 100 ms</td> <td>6 - 600 ms (default)</td> </tr> <tr> <td>2 - 200 ms</td> <td>7 - 700 ms</td> </tr> <tr> <td>3 - 300 ms</td> <td>8 - 800 ms</td> </tr> <tr> <td>4 - 400 ms</td> <td>9 - 900 ms</td> </tr> <tr> <td>5 - 500 ms</td> <td>0 - 1000 ms</td> </tr> </table>	1 - 100 ms	6 - 600 ms (default)	2 - 200 ms	7 - 700 ms	3 - 300 ms	8 - 800 ms	4 - 400 ms	9 - 900 ms	5 - 500 ms	0 - 1000 ms
1 - 100 ms	6 - 600 ms (default)										
2 - 200 ms	7 - 700 ms										
3 - 300 ms	8 - 800 ms										
4 - 400 ms	9 - 900 ms										
5 - 500 ms	0 - 1000 ms										
Pause Duration	<p>The PBX Pause feature allows the user to insert a delay into speed dialing numbers. This is required when dialing out through a system that provides a second dialtone (e.g., PBX). Different PBX devices may require different pause durations to allow enough time for the second dial tone to be returned. The pause duration is user programmable.</p> <p>To change the PBX Pause duration:</p> <ol style="list-style-type: none"> 1. Make sure the Talk/Monitor switch is in Monitor mode. 2. Press the STORE/PROG key. 3. Press the PAUSE key. 4. Press one of the following number keys (1 through 4) to select the desired pause length. Invalid entries are ignored. The test set provides a confirmation tone when the entry is accepted. <table border="0" data-bbox="462 1514 678 1629"> <tr> <td>1 - 2 Seconds</td> </tr> <tr> <td>2 - 3 Seconds</td> </tr> <tr> <td>3 - 4 Seconds (default)</td> </tr> <tr> <td>4 - 5 Seconds</td> </tr> </table>	1 - 2 Seconds	2 - 3 Seconds	3 - 4 Seconds (default)	4 - 5 Seconds						
1 - 2 Seconds											
2 - 3 Seconds											
3 - 4 Seconds (default)											
4 - 5 Seconds											
Speaker/High Volume Timeout	<p>The loud speaker draws more current from the battery than any other circuit on the test set. The battery will be drained quickly if the loud speaker is left on continuously. To extend battery life, the test set has a timeout function that automatically turns off the loud speaker in 2 minutes when the test set is on-hook. A timer is started whenever the test set is put on-hook. As long as the test set is off-hook, the timer will not start.</p>										

<p>Speaker/High Volume Timeout (Cont'd)</p>	<p>If the test set is used as a handset in Monitor mode and if the test set's receiver has been set to high volume, the battery will be required to deliver enough current to drain the battery sooner than desired. So the same timeout that is applied to the loud speaker is applied to the high volume state in Monitor mode. If the test set is in Monitor mode with the receiver's volume set to high volume the unit will revert to low volume after the timeout. When the test set is in Monitor mode with the loud speaker off and with the receiver volume set to low, it draws very little current from the battery.</p> <p>The default timeout duration is 2 minutes while on-hook and 240 minutes (4 hours) while off-hook. The off-hook timeout cannot be changed, but the on-hook timeout duration is user programmable. Remember, the longer the selected timeout duration the shorter the battery life.</p> <p>To change the speaker timeout duration:</p> <ol style="list-style-type: none"> 1. Put the test set in Monitor mode. 2. Press the STORE/PROG key. 3. Press the SPKR key. 4. Press the number keys (1 through 6) to select the desired duration. Invalid entries are ignored. The test set provides a confirmation tone when the entry is accepted. <ul style="list-style-type: none"> 1 - 2 Minutes (default) 2 - 5 Minutes 3 - 10 Minutes 4 - 20 Minutes 5 - 30 Minutes 6 - 40 Minutes
<p>Factory Defaults</p>	<p>The Restore Defaults function allows the user to restore all programmable features to their original factory settings. Performing this function does not clear stored telephone numbers. The defaults are:</p> <p>Pause Duration — 4 seconds. Hook Flash Duration — 600 ms. Speaker Timeout — 2 minutes.</p> <p>To reset factory default values:</p> <ol style="list-style-type: none"> 1. Press the STORE/PROG key. 2. Press the pound (#) key. The test set provides an audible indication when the entry is accepted.
<p>Software Upgrade</p>	<p>The test set can be upgraded as new releases become available. Contact Customer Service for obtaining software upgrades. Instructions for installing the upgrades are provided with the software upgrade.</p>

Maintenance



WARNING:

Disconnect clips from any metallic connections before performing any maintenance. Read all instructions completely and understand possible hazards to end user if maintenance is not performed properly.

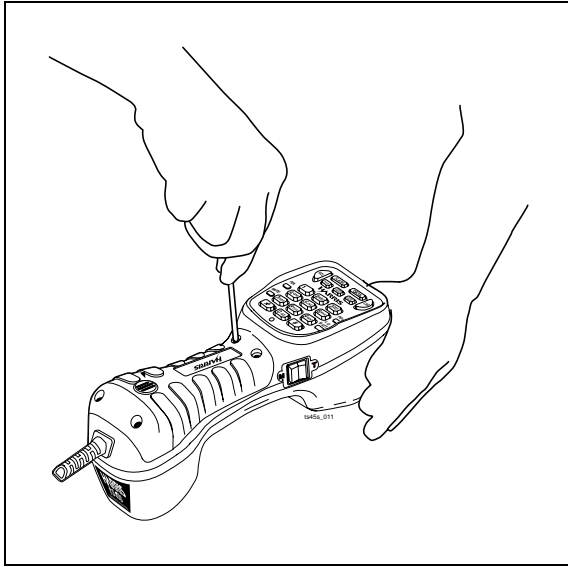


Figure 4. Battery Door View of Test Set

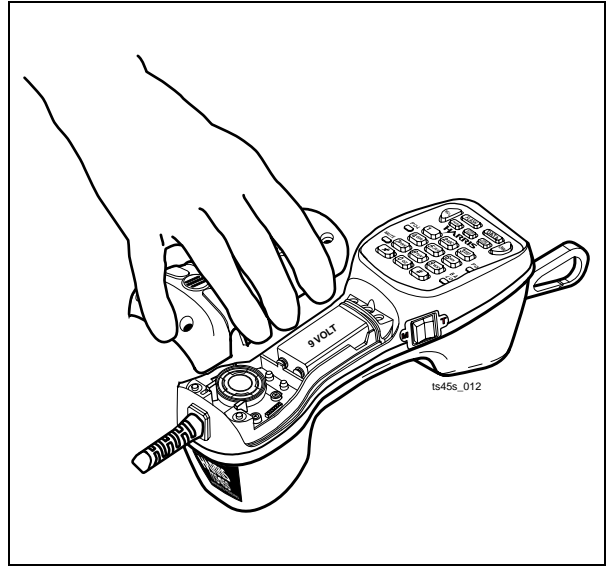


Figure 5. Removing Test Set Door Cover

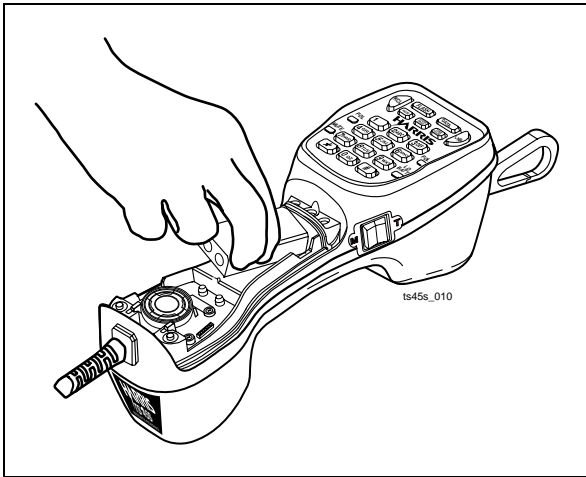


Figure 6. Removing the Batteries

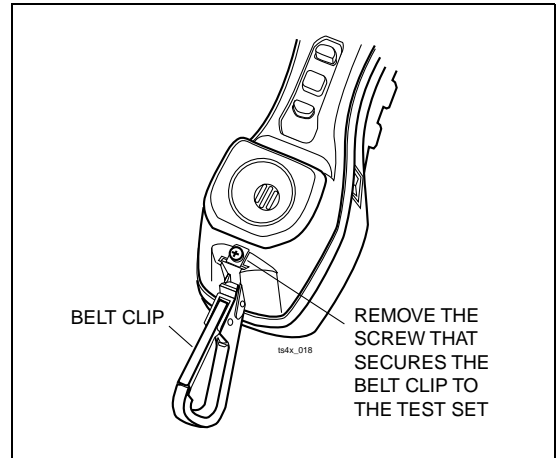


Figure 7. Belt Clip Replacement

Replacing the Line Cord

A worn out or damaged line cord can be replaced by the user. To obtain a replacement line cord contact your local distributor or Harris Corporation at the location given in the Warranty Section.



WARNING:

Read all instructions completely and understand possible hazards to end user if not performed properly.



WARNING:

Disconnect test set clips from any metallic connections before performing this maintenance.

<p>Removing the Old Line Cord</p>	<p>To remove the old line cord:</p> <p>Notes: 1. Battery cover screws are retained in the cover and will not come all the way out. 2. Be careful not to damage or pinch the speaker wires, printed circuit faces or insulating materials. 3. Be sure to account for all hardware removed. Loose or missing hardware could create a hazard for the end user.</p> <ol style="list-style-type: none"> Using a Phillips screwdriver, loosen only the four screws attaching the battery door cover to the back of the test set (see Figure 4). Remove the battery door cover (see Figure 5) and battery from the test set. Loosen the two screws that hold the line cord to the PCB (see Figure 8). Using needle nose pliers or one of the line cord clips, remove the two screws and washers from the line cord connectors. Remove the plastic clip (see Figure 9) that holds the line cord strain relief in place. Slip the line cord screw lugs (see Figure 10) through the hole in the end of the housing.
<p>Installing New Line Cord</p>	<p>To install a new line cord:</p> <ol style="list-style-type: none"> From the outside of the housing, slide the screw lugs of a new line cord through the hole in the end of the test set housing. Make sure the crimp barrel offset side of the screw lugs is up (see Figure 11) and that the line cord screw lugs are flush against the circuit board. Fasten the red wire lug to the PCB (Ring) with screw and washer (see Figure 10). Fasten the black wire lug to the PCB (Tip) with screw and washer (see Figure 10). Insert the plastic clip over the line cord strain relief at the base of the test set housing (see Figure 9) and press tightly into place. Inspect all work to ensure no pinched wires or areas where weather resistance and safe operation is affected. Reinstall the battery. Observe the proper polarity. <p>Note: Do not over tighten screws. Over tightening will strip the plastic.</p> <ol style="list-style-type: none"> Place the battery door cover (see Figure 5) on the test set and fasten the four screws (see Figure 4). Tighten screws to a maximum torque of 0.904 N-m or 8 in-lb.

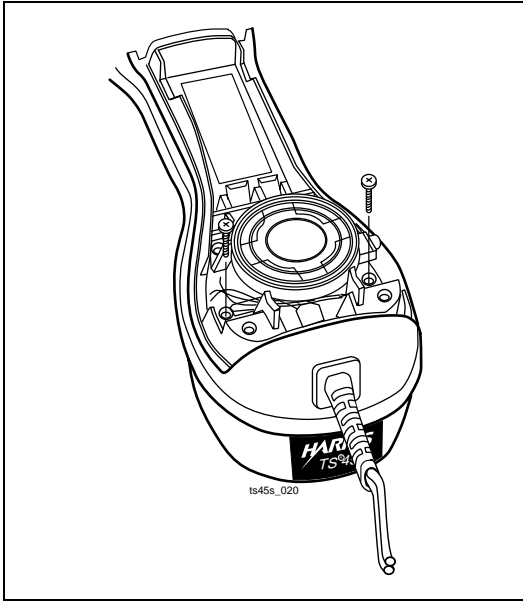


Figure 8. Removal/Installation of Line Cord Screws

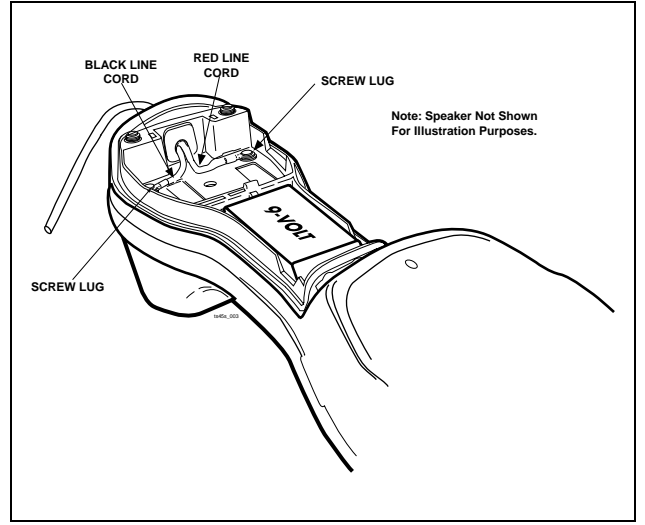


Figure 10. Removal/Installation of Line Cord Screw Lugs

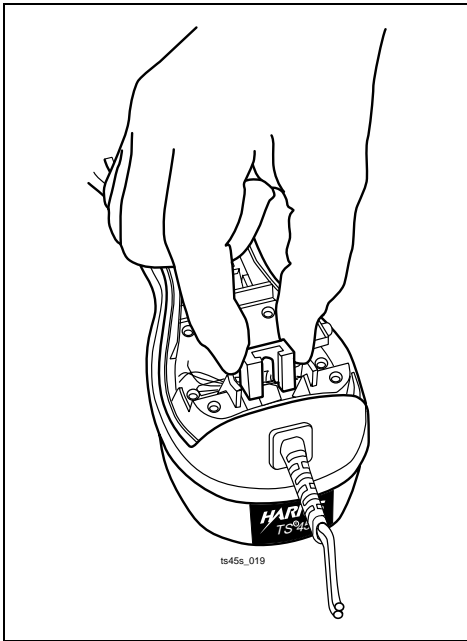


Figure 9. Removal/Installation of the Plastic Clip

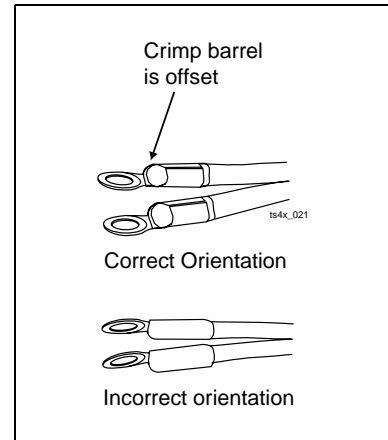


Figure 11. Orientation of Line Cord Screw Lugs

Warranty

Harris Corporation agrees to warranty its products are free from defects in material and workmanship for the following periods:

- Butt Sets and Test Sets – 18 months from date of manufacture.
- Line Cords and Accessories – 90 days from date of purchase.

This warranty constitutes the sole and exclusive warranty for products sold by Harris Corporation, Network Support Division, and is in lieu of any other warranty, express, implied, or statutory, including the warranty of merchantability and fitness for a particular purpose. In no event shall Harris be liable for any special, incidental, indirect, or consequential damages arising out of the use of any product or from any other cause.

This warranty shall not apply to products which have been subjected to mishandling, abuse, misuse, negligence, or accident, nor to products which have been modified, altered, or repaired by personnel not authorized by Harris.

Non-Warranty

Out-of-warranty maintenance, service, or repair of products is available from the Harris Corporation, Network Support Division, on a time and materials basis. In addition, Harris offers for sale some replacement components. Harris Corporation recommends that out-of-warranty service and repair of electronic products be completed at its Harris Corporation Network Support Division, facility or authorized representative. Contact Harris Repairs for the location of the Harris authorized repair facility nearest you.

Return or Repair of Equipment

The return of any products for credit, other than for warranty service, is done at the sole discretion of Harris Corporation. Before any product is returned, including for warranty service, a Return Authorization ("RA") number must be obtained from the Customer Service Department by calling (800) 437-2266. If the RA number is not clearly marked on the shipping label, the package will not be accepted by Harris. All authorized returns must be shipped, with shipping charges prepaid, fob destination, and addressed as follows:

Harris Corporation
Network Support Division
809 Calle Plano
Camarillo, California 93012-8516
United States of America
Attn: Customer Service, RA# xxxxx

Specifications

[Table 5](#) lists TS45S Test Set specifications.

Table 5. Specifications

Parameter	Working Limits
ELECTRICAL	
Current Range (Off-Hook)	10 to 100 mA
DC Resistance	
Off-Hook	150 Ω nominal
On-Hook	>3 M Ω
AC Impedance	
Off-Hook	600 Ω nominal; 300-3400 Hz
On-Hook	>120 k Ω ; 300-3400 Hz
Rotary Dial Output	
Pulsing Rate	10 pps \pm 1 pps
Break/Make Ratio	60/40
Interdigit Interval	>300 ms
Resistance During Break	>100 k Ω

Table 5. Specifications (Continued)

Parameter	Working Limits
ELECTRICAL (Cont'd)	
DTMF Output	
Tone Frequency Error	±1.5 % maximum
Tone Level	-3 dBm combined (typical)
High versus Low Tone Difference	2 dB ± 2 dB
Memory Dialing	
Memory Capacity	10 speed dial memories plus one last number redial memory
Digit Capacity	23 digits per memory
PBX Pause Duration	User programmable; default = 4 seconds
Hook Flash Duration	User programmable; default = 600 ms
Automatic Speaker Shut Off Duration	User programmable; default = 2 minutes.
Battery	9 Volt Alkaline or Lithium battery
Data Detection and Lockout Capability	Twisted pair data services including: T1, E1, ISDN PRI, ISDN, BRI, HDSL, SW56, ADSL, IDSL, and SDSL.
PHYSICAL	
Length	254 mm (10 inches)
Width	96 mm (3¾ inches)
Height	107 mm (4¼ inches)
Weight	Less than 0.68 kg (1.5 pounds)
ENVIRONMENTAL	
Water Resistance	Designed to be rain and moisture resistant.
Temperature Range	Operating: -34° to 60°C (29° to 140°F) Storage: -40 to 66°C (-40° to 150°F)
Altitude	To 3,000 meters (10,000 feet) max.
Drop	Designed to withstand two 20-foot drops and twelve 12-foot drops onto concrete.
Note: Specifications subject to change without notice.	

